



January 1st 2025

Helimod Board v5 Wiring Layout

Programmable I/O

Digital Tab – IOP_GPIO1 to Conventional, Input, External PTT 1, Low, Debounce 10

Audio Tab – EPTT1 to Tap In T5, Flat or Emphasised

PTT Tab – External PTT (1) Audio Source to Audio Tap In

Adjustments

Mic Trimpot (R10) - Adjust for a maximum of 6% distortion or max deviation for channel (2.5 or 5kHz)



Speaker Trimpot (R4) – $\frac{3}{4}$ open, 0.200mV @ 1kHz audio

Adjust R12 for Sidetone Level

External Connections – DB9 Male Plug

1. Mic Live
2. NC
3. Audio Out
4. NC
5. PTT
6. Mic GND
7. GND
8. NC
9. NC

DB9 Male

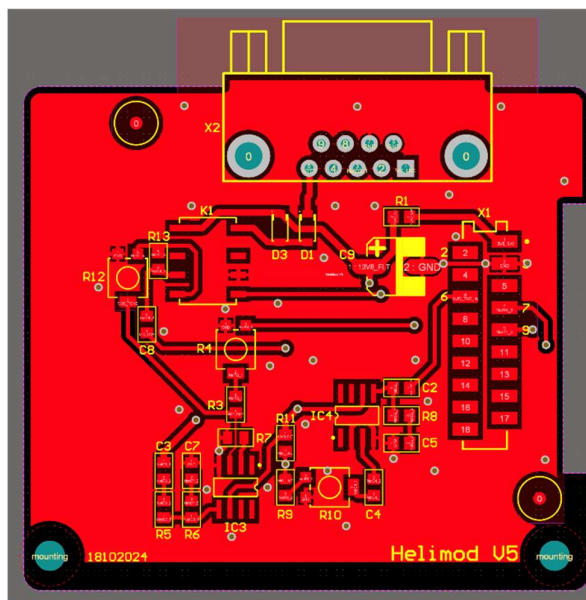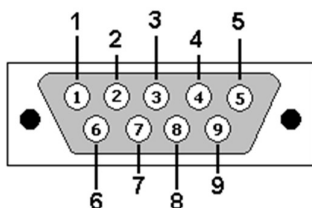

Part No - HELIMODV5	Revision 1.7	Copyright
Connections and Programming	Sheet 1 of 1	Summit Radio Solutions Ltd
January 1 st 2025		